



LED DRIVER REPLACEMENT:

(Not necessary for initial installation – only required if the driver has stopped working.)


1. DISCONNECT POWER AT THE CIRCUIT BREAKER.
2. Remove the wall lantern from the wall and disconnect its wires from the power supply wires.
3. Remove the CAGE SCREWS and separate the CAGE from the HOOD. (Fig. 11/12)




4. Remove the LED PLATE SCREWS and separate the LED PLATE from the HOOD. (Fig. 13/14)

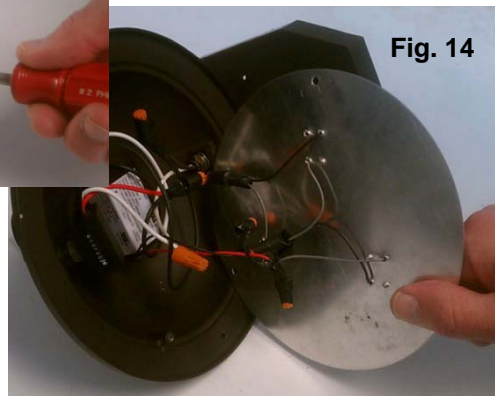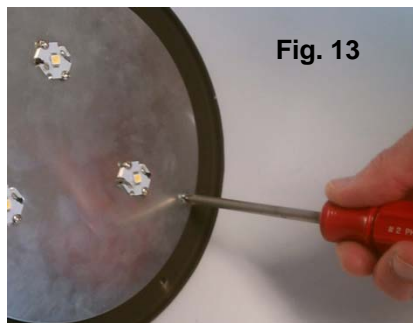

5. Separate the LED DRIVER CONNECTOR from the PLATE CONNECTOR. (Fig. 15)

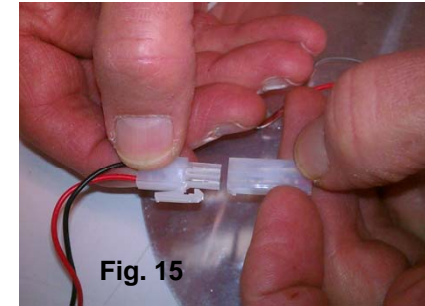

6. Remove the WIRE NUTS and separate the LED DRIVER WIRES from the FIXTURE WIRES. (Fig. 16)

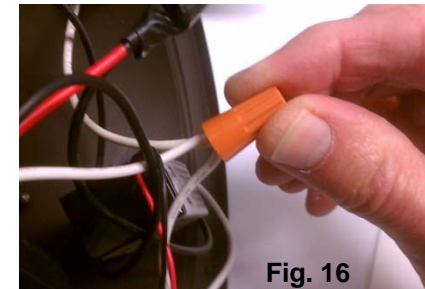

7. Remove the DRIVER SCREWS and separate the OLD LED DRIVER from the HOOD and replace it with the NEW LED DRIVER, securing it in place using the DRIVER SCREWS. (Fig. 17)



8. Strip about 3/8" of insulation from the BLACK and WHITE WIRES of the NEW LED DRIVER. Using WIRE NUTS make the following wire connections:

FROM FIXTURE		FROM NEW LED DRIVER	
RED WIRE	to	BLACK WIRE	
2 WHITE WIRES	to	WHITE WIRE	

9. Connect the LED DRIVER CONNECTOR to PLATE CONNECTOR. (Fig. 15)
10. Replace the LED PLATE onto the HOOD using the PLATE SCREWS. (Fig. 13/14)
11. Secure the CAGE onto the HOOD using the CAGE SCREWS. (Fig. 11/12)
12. Reconnect the fixture to the power supply wires and mount it back onto the wall. (Fig. 10)